


29.Mode Door Actuator

A: REMOVAL

- 1) Remove the knee airbag module. <Ref. to AB-34, REMOVAL, Knee Airbag Module.>
- 2) Remove the motor - actuator mode.
 - (1) Disconnect the connector, and remove the rod from the rod clamp.
 - (2) Remove the screws and detach the motor - actuator mode.

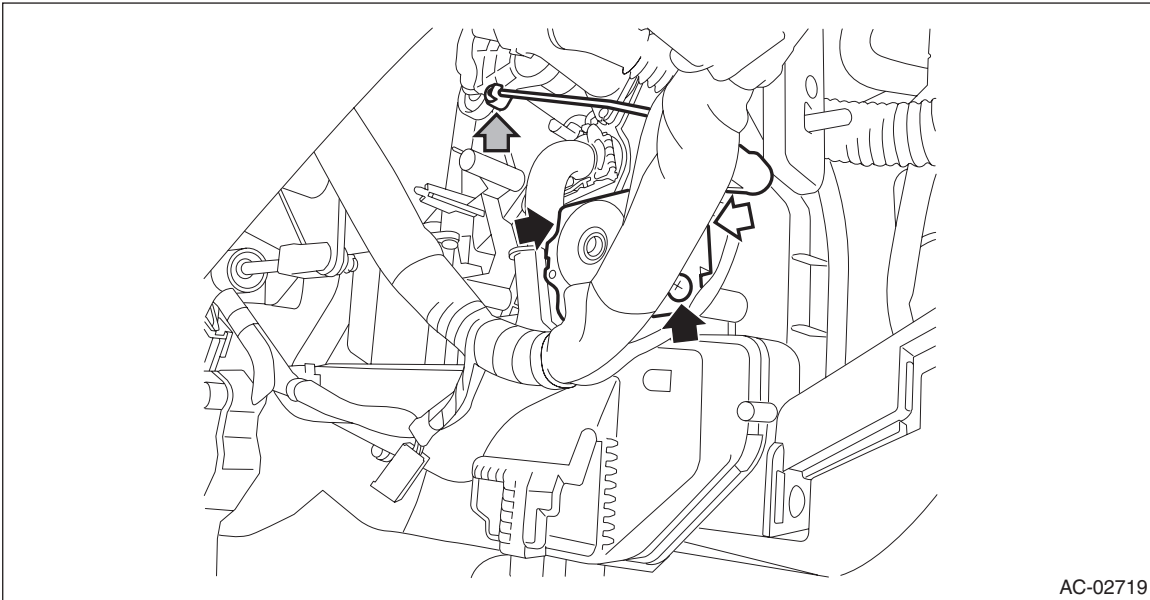

AC-02719

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

1. CHECK LINK

- 1) Visually check the operation range of the link, and remove the foreign material if any.
- 2) Operate the air flow control dial or switch to check that the link operates normally.
- 3) If it does not operate normally as the result of inspection, check the motor - actuator mode.

2. CHECK ACTUATOR

UNIT INSPECTION

PREPARATION TOOL:

Circuit tester

- 1) Check the resistance between actuator terminals.

Terminal No.	Inspection conditions	Standard	Connector sketch
3 — 1	Always	80 — 100 Ω	
3 — 2			
3 — 5			
3 — 6			

AC-02839

- 2) Replace the motor - actuator mode if it is found defective as a result of inspection.